



**KEEP VEHICLES UP TO DATE
WITHOUT INTERRUPTION**

Update your DAF

HOW REMOTE UPDATES WORK

1

UPDATE NOTIFICATION



When a new update is available, a message will appear in the driver display.

2

RUN THE UPDATE AT YOUR NEXT STOP



- Park the vehicle in a safe location.
- Apply the parking brake.
- Switch off the engine
- Do not switch off the ignition.
- Minimise power consumption

3

START THE UPDATE



On the display: select "Start update" and follow the instructions on the screen.

4

DURING THE UPDATE



Important:

- ⚠ Do not move the vehicle.
- ⚠ Do not switch off the ignition.
- ⚠ Do not interrupt the update.

The duration may vary depending on the update.

5

UPDATE COMPLETED



After successful installation, a confirmation appears in the display.

- ✓ Your vehicle is ready to drive again.

BENEFITS FOR THE DRIVER



**No unnecessary
workshop visits**



**Updates conveniently
over mobile network**



**Maximum
uptime**



**Improved vehicle
performance**



**Safer and more
reliable**

QUESTIONS OR SUPPORT? CONTACT YOUR DAF DEALER WWW.DAF.COM

A PACCAR COMPANY DRIVEN BY QUALITY

DAF